

Lounge Chair & Ottoman









Before you begin

Use a soft floor covering. Two people are recommended when turning the chair upright.


Support: support@moderneryco.com

Parts & hardware

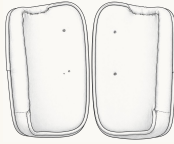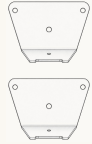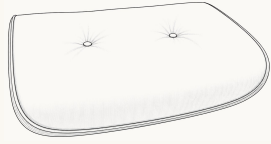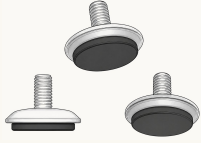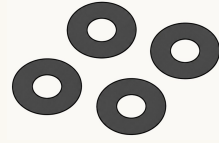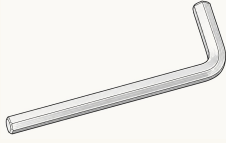A  Chair upper x1	B  Armrest pads x2	C  Armrest brackets x2
D  Chair swivel mount x1	E  Chair five-star base x1	F  Ottoman upper x1
G  Ottoman swivel mount x1	H  Ottoman pedestal post x1	I  Ottoman four-star base x1
J  Threaded foot glides x9	K  Long base bolts x9	L  Flat washers x8
M  Silver center bolt x1	N  Large center washer x1	O  Medium armrest bolts x4
P  Short armrest bolts x4	Q  Allen key x1	

Attach the chair swivel mount

K + L ×4

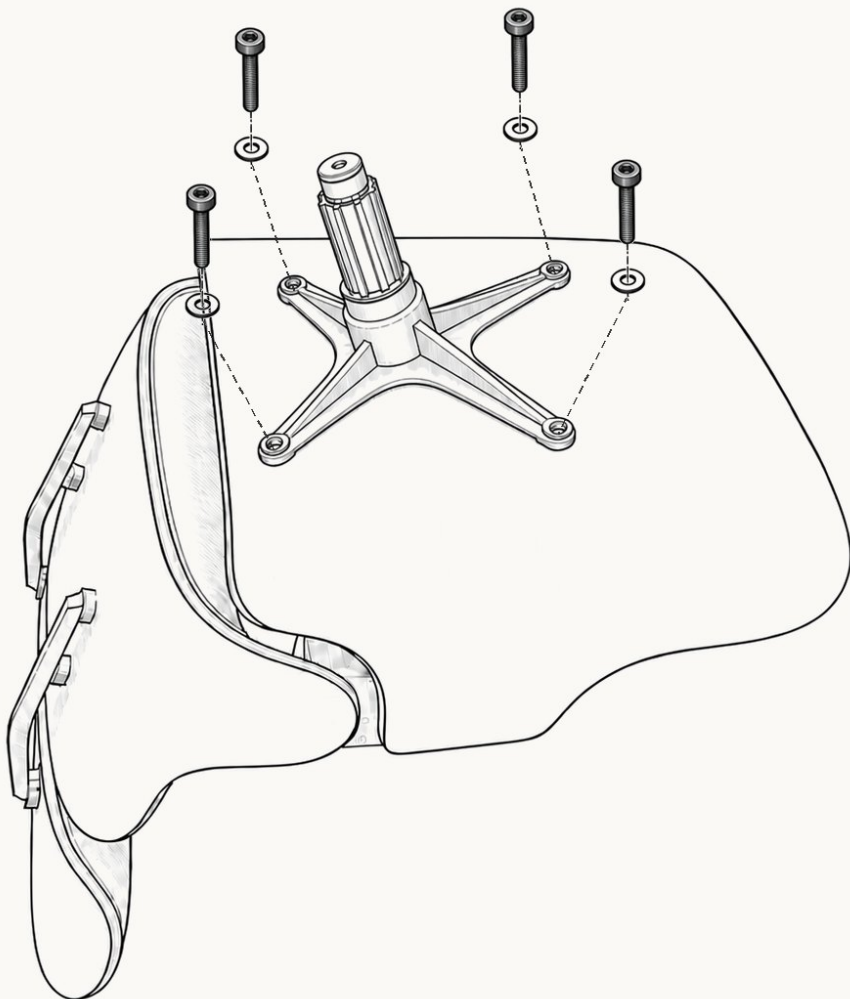


Step 1

- 1** Lay chair upper A upside down on a clean, padded surface.
- 2** Place swivel mount D flush over the four threaded holes. Its spindle rises away at the shell's angle. Orient the short rear arms toward the chair back; the long arms point toward the front edge.
- 3** At each arm, put one washer L beneath one long bolt K. Start all four bolts by hand.
- 4** Tighten with Allen key Q in a cross pattern. Do not fully tighten one corner first.

A + D | K + L ×4 | Q

Fit the base, center fastener & glides


2 Seat the five-star base

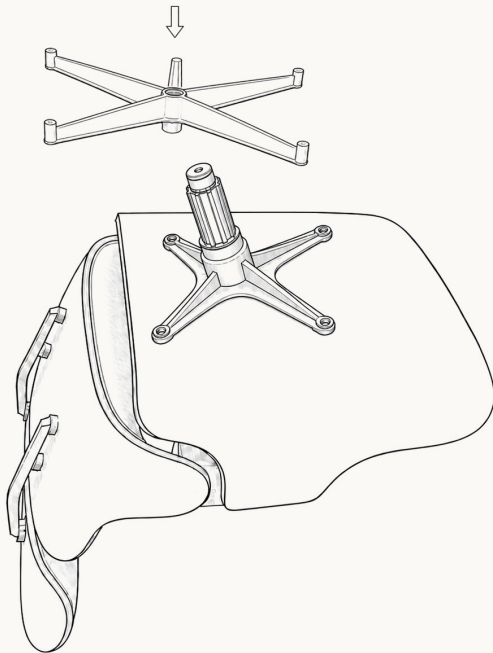

Keep chair A upside down. Lower base E over the angled spindle with its dark underside and five glide sockets facing outward; the polished face points toward the chair.

E x1


3 Secure the center

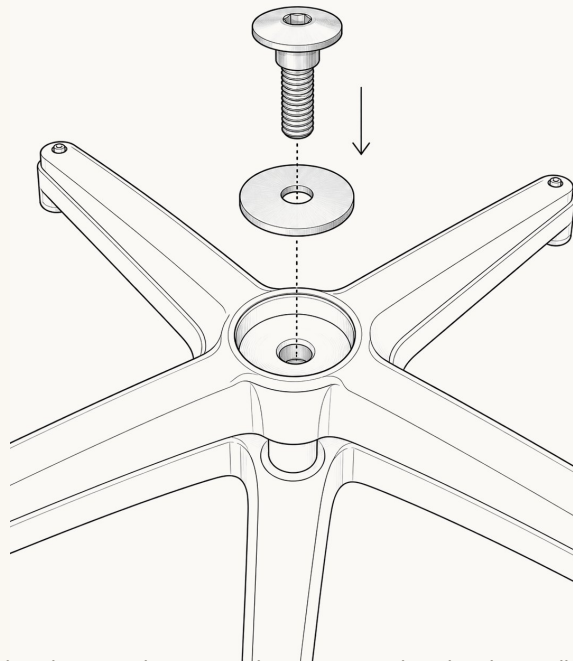

Place large washer N over the center opening, then insert silver center bolt M through it and tighten with Q.

N first • M second • Q

4 Install five glides

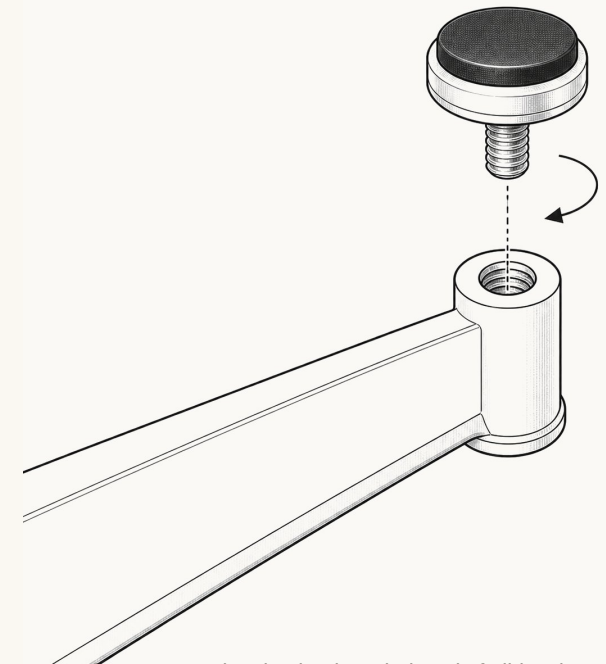


At every base-arm end, point the threaded stud of glide J into the hole. Turn clockwise until snug; the pad remains outside.

J x5

Build & attach both armrests

Complete the same two operations for the left and right sides. Armrest bolts do not use washers.


5 Attach bracket C to pad B

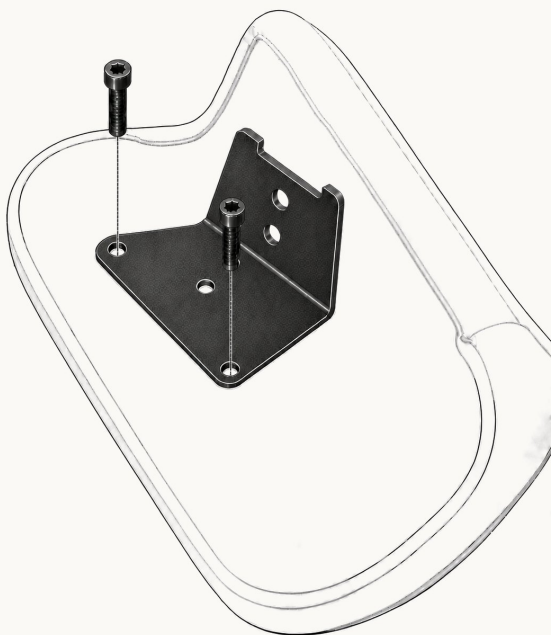

Align the wide flange of bracket C with pad B. Insert two medium bolts O through the two outer edge holes and tighten evenly; leave the center hole unused.

B + C | O x2 PER ARMREST | NO WASHERS

6 Attach armrest to chair A

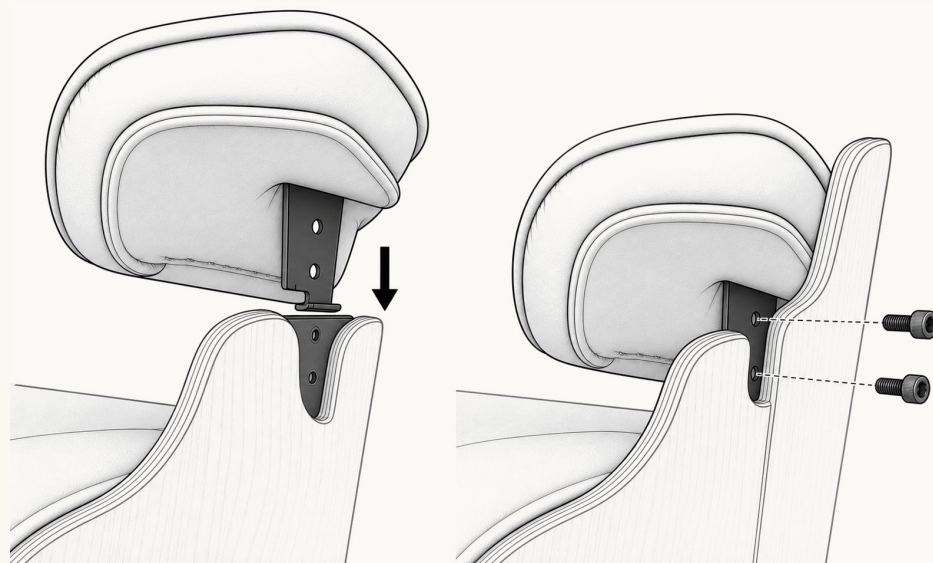


Set bracket C over the recessed side mount. Push the armrest straight down until fully seated in the indent, then insert two short bolts P and tighten evenly.

C + A | P x2 PER SIDE | NO WASHERS

Attach the ottoman swivel mount

K + L x4

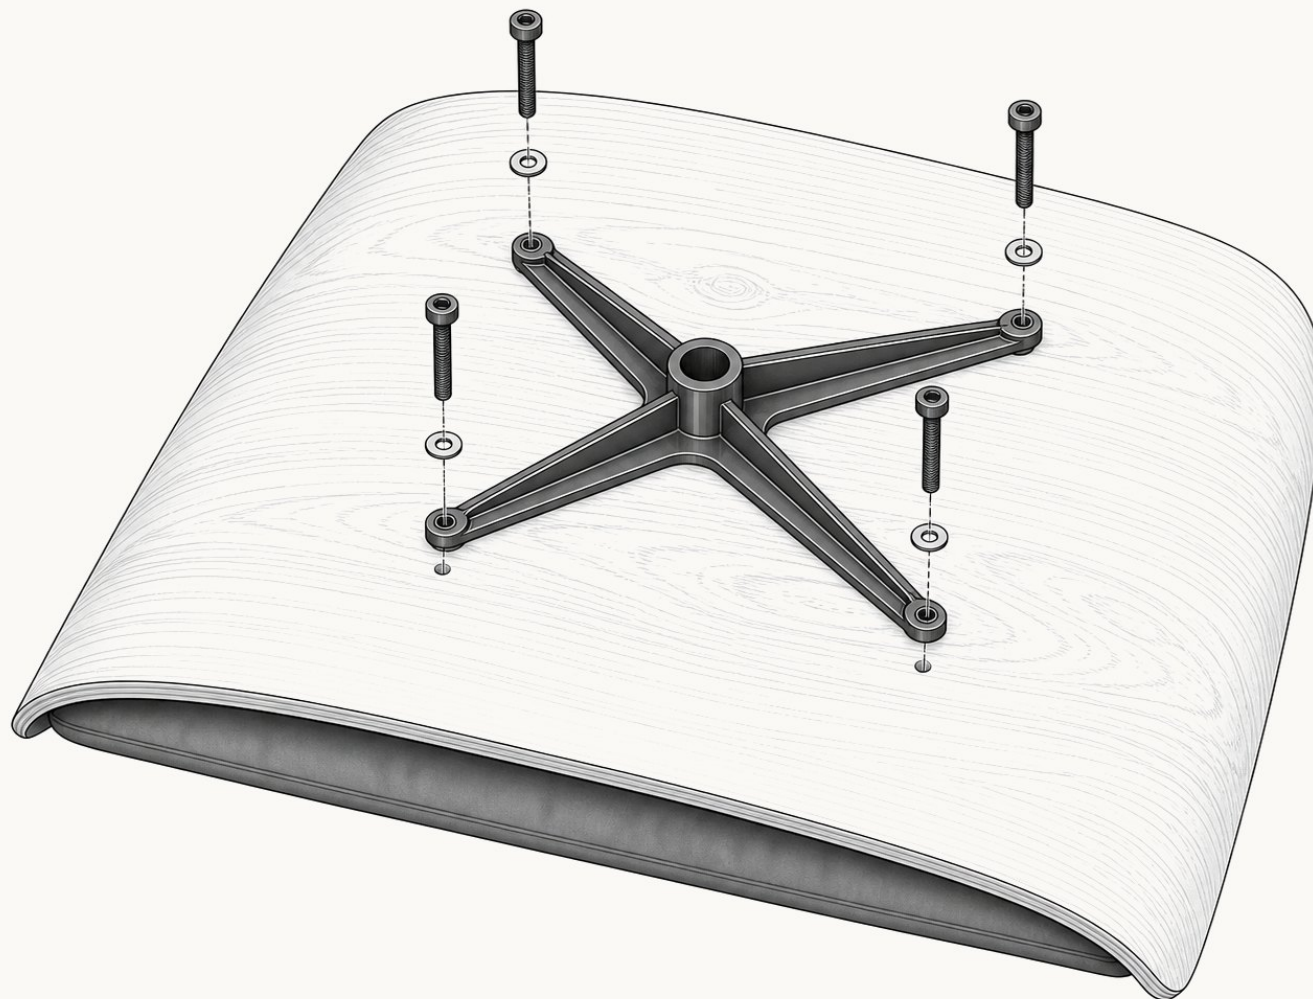


Step 1

- 1 Lay ottoman upper F upside down on a clean, padded surface.
- 2 Center swivel mount G over the four threaded holes.
- 3 At each arm, put one washer L beneath one long bolt K. Start all four bolts by hand.
- 4 Tighten with Allen key Q in a cross pattern. Do not fully tighten one corner first.

F + G | K + L x4 | Q

Fit the post, base & glides


2 Insert pedestal post H

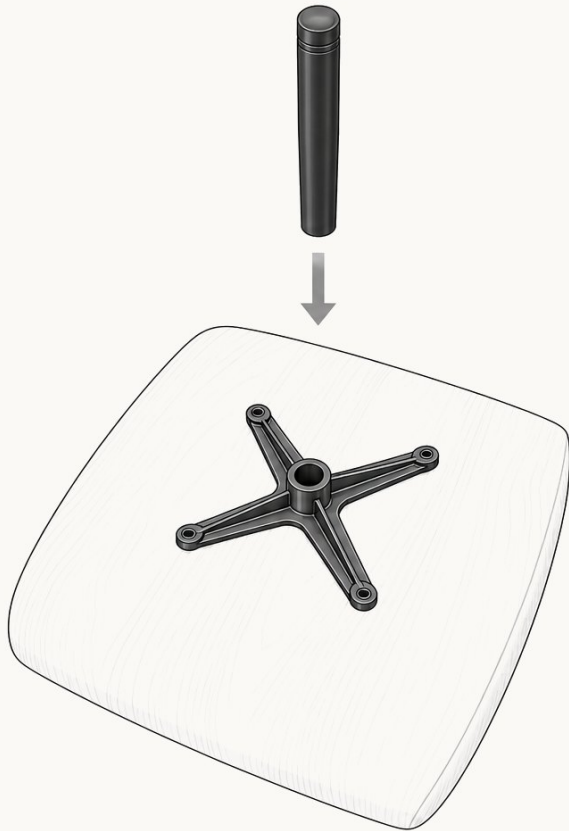


Plain/bevelled end of H enters mount G; ringed end remains up. Lower base I over the ringed end and press until fully seated.

H: PLAIN END DOWN | I x1: RINGED END UP

3 Lower four-star base I

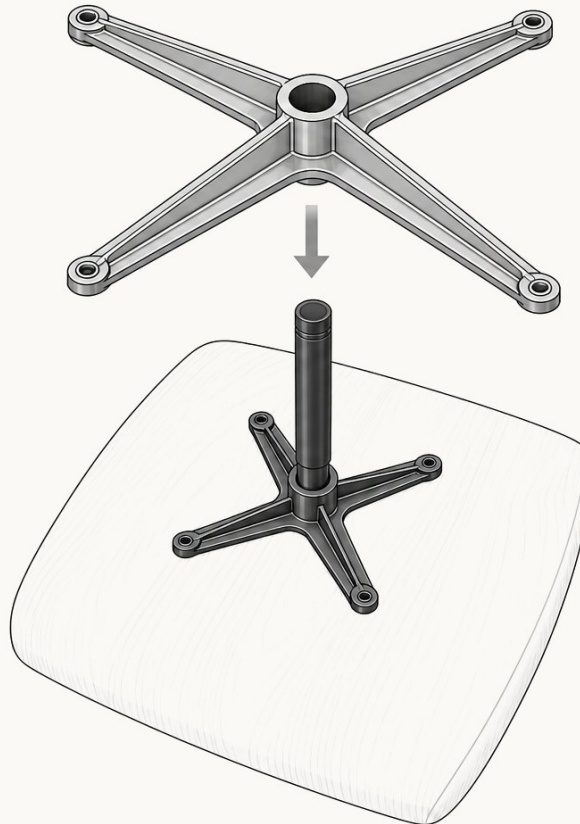

4 Install four glides J

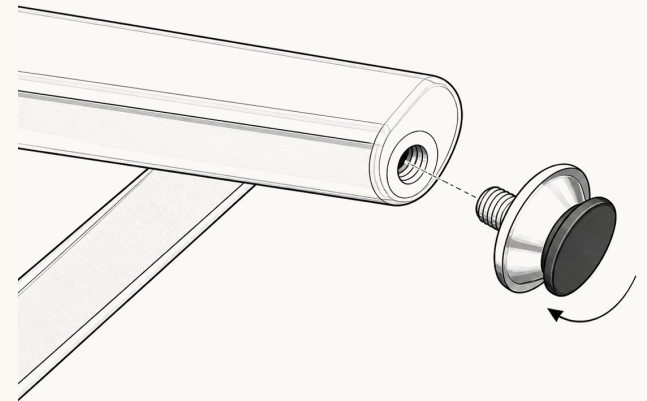

At each base-arm end, point the threaded stud into the hole and turn clockwise. The rubber pad remains outside.

J x4